




SHANGHAI NEWTOP MACHINERY CO.,LTD.

Add: 101B Building 6 Xinqiao Creative Park No 183 Yinshan RD Pudong Shanghai China

Tel: +86-21-51692011 Fax: +86-21-51692022

Web: www.newtopen.com E-mail: online@newtop.com.cn

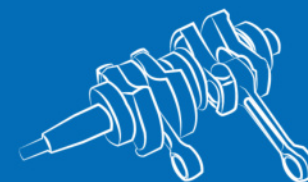

OUTBOARD SPARE PARTS



Enterprise Introduction

At NEWTOP, we spent 20 years in constantly looking for ways to deliver reliable and powerful gasoline machines. Our only aim is to make work easier and more enjoyable.

With years' development, our company has reached an annual capacity of 500,000 units of machines including outboard motors, power engines, brush cutters and chainsaws. Up to now, we have established the CNC AL-MG processing center, the injection mould center and the Testing Center which is equipped with emission testing equipments, gascomposition analyzer, magneto testing desk, metal composition analyzer, hardness tester etc.

The adoption of these advanced facility from America, Germany and Japan enables us to supply top quality machines to customers all over the world with high efficiency. Our complete testing equipments, strict QA procedures and professional engineers ensure the reliability and safety of our machines. Our equipments and technology control standards have reached the internationally advanced level. Our products have passed CE, GS, EURO V, EPA certification, and our company is also certified with ISO90001-2000 standards.



Cleaning



Spraying line



Grinding



Engine assembly line



Fixed bracket area



Gearbox assy area




Middle case area



Base area



Machine assembly

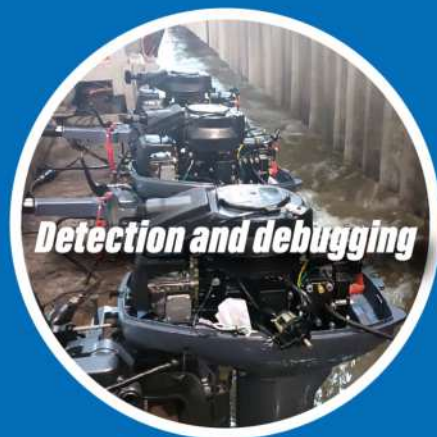

Detection and debugging



CERTIFICATE



CONTENTS

T9.8 01

T9.9/T15-63V..... 05

T15-6B4 09

T30 13

T40X 17

T40J/T40G 21

Propeller Assy 25



T9.8



Side of a mount
rubber lower
3B2-61302-0



Reverse lock shaft
3B2-66321-1



Mount barcket L
3B2S61401-0



Mount barcket R
3B2S61402-1



Steering shaft
3B2S62010-0



Water pipe upper
grommet
3B2-65195-0



Exhaust pipe
3B2-02311-0



Exhaust pipe gasket
3B2-02312-0



Choke rod
3B2-67151-0



Bottom cowling
3B2S67100-1



Swivel bracket
3B2S62310-0



Clamp handle rivet
3C8-62104-0



Clamp handle
307S62102-0



Clamp screw pad
332-62101-0



Clamp screw
369-62103-0



Shift lever spring plate
3C8-66116-0



Starter lock lever
3B2-05211-1



Throttle drum holder
3B2-63506-0



Throttle drum
3B2-63611-0



Advancer lever &
Rod snap
3B2-63711-0
345-05224-0



Stern bracket R
369S62112-3



Stern bracket L
369S62113-2



Steering handle
3B2S63011-1



Lanyard stop switch &
lock
398-06830-0
353-06821-0



Upper casing gasket
3B2-61012-0



Throttle control link rod
3B2-63716-0



Throttle arm
3B2-63751-0



Shift lever
3B2-66110-0



Shift rod lever
3B2-66225-0



Pinion gear needle
bearing
3B2-60211-0



Pinion gear
3B2-64020-0



**Forward gear &
Reverse gear**
3B2-64010-0
3B2-64030-0



Clutch spring
3B2-64221-0



Propeller thrust holder
3B2-64230-0



Pump case liner
3B2-65011-0



Oil seal set
3B2-01215-0



Oil seal set
101-00121-00
3B2-001220



Piston needle bearing
338-00042-0



Cylinder head gasket
3B2-01005-0



Engine base gasket
3B2-01303-0



Pump case upper
3B2-65016-0



Pump case lower
3B2-65017-0



Outer Plate gasket
3B2-65018-0



Plunger shift
3B2-65020-0



Impeller
3B2-65021-1



Outer exhaust cover
3B2B02300-0



Exhaust cover gasket
3K9-02305-0



Cylinder head
3K9B01001-0



Crankcase
3K9B01100-1



Exhaust inner cover
3K9-B02302-0



Outer plate
3B2-65025-0



Outer plate gasket lower
3B2-65029-0



Propeller
3B2B64515-1



**Lower pump case
oil seal**
309-60111-0



**Water pipe lower
grommet**
331-65014-0



Carburetor
3K9-03200-0



Fuel filter comp
369-02230-0



Fuel line comp
3B7-70200-3



Water inlet



Crankshaft
3B2-00030-0



Bearing housing o-ring
345-65015-0



Propeller nut
369-64121-0



Propeller washer
369-64124-0



Housing ball bearing
9601-0-6004



Split pin
951503-0318



Crankcase head gasket
3B2-01214-0



Starter lock rod
3B2-05217-1



Bracket distance plate
3B2-62118-0



Throttle cable
3B2-63600-1



Propeller shaft & clutch
3B2-64211-0



Flywheel
3B2-06101-0



Stator coil base
3B2-06102-1



Exciter coil
3B2-06120-0



C.D.I unit
3B2-06170-0



Lower set plate
3B2-63724-0



Drive shaft L
3B2-64302-0



Water pipe L
3B2-65110-0



Shift cam shaft assy L
3B2-66013-0



Fuel tank assy (12L)
3B2-70167-0



Lower casing
3B2S60000-0



Coil plate stopper
3K9-05233-0



Air silencer
3B2-02411-0



Intake manifold
3B2B02010-0



Carburetor gasket
369-02011-0



Piston assy
3B2-00011-0



Shift lever stopper
3C8-66112-0



Top cowling assy
3K9S67500-1



Trim tab anode
3V1-60217-0



Ball joint B
346-05228-0



Clutch ring

T9.9/ T15-63V





Lower casing packing
63V-45315-A0



Pump of housing lower
63V-45331-00-CA



Drive shaft assy L
63V-45510-11



Pinion gear
63V-45551-00



Forward gear &
Reverse gear
6E7-45560-01
6E7-45571-00



Reed valve assy
63V-13610-10



Intake silencer assy
63V-14440-A0



Choke rod
63V-41257-00



Thermostat
6E5-12411-02



Cylinder head
6E7-11111-01-1S



Water seal of damper
647-44366-00



Cross pin ring
648-45633-00



Plunger Shift
650-45635-00



Clutch dog
682-45631-00



Propeller shaft
683-45611-00



Cylinder head gasket
63V-11181-A1



Crankcase
63V-15100-02



Exhaust inner cover
63V-41111-00-1S



Exhaust inner cover
gasket
63V-41112-A0



Exhaust outer cover
63V-41113-00-1S



Straight pin
90250-05010



Compression spring
90501-14M06



Pump base oil seal &
Propeller shaft oil seal
93101-20001
93101-17001



Pump O-ring
93210-44398



Gear II bearing
93306-00501



Engine anode
682-11325-00



Thermostat cover
682-12413-00-1S



Thermostat cover
gasket
682-12414-A1



Spark plug
94702-00160



Piston assy
6E7-11631-00-97



Pinion gear needle
bearing
93315-314V8



Propeller shaft
needle bearing
93315-317U2



GEAR I bearing
93332-00005



Pinion bearing
93341-41414
6E8-45587-10



Spacer
6E7-45987-01



Crankshaft assy
63V-11400-00



Oil seal housing
63V-15396-01-CA



Housing oil seal
93101-13M27



Crankshaft lower
oil seal
93101-25018



Crankshaft upper
oil seal
93110-23M00



Water inlet 1&2 cover
6G1-45214-00
63V-45215-00



Lower casing anode
61N-45251-01



Water tube 1 L
63V-44361-11



Castle nut
90171-10M01



Plate washer
90201-10M01



Piston needle bearing
93602-14104



Fuel pipe joint comp.1
6G1-24304-02



Fuel filter assy
61N-24560-00



C.D.I unit assy
63V-85540-01



Ignition coil assy
63V-85570-00



Cotter pin
91490-30020



Magnet base retainer
63V-41611-00



Charging coil
63V-85520-01



Rotor assy
63V-85550-11



Pulser coil
63V-85580-01



Starter assy
63V-15710-20



Top cowling assy
63V-42610-00



Carburetor
63V-14301-00



Propeller
3-9.25X11J



Steering handle assy
63V-42111-01-4D
(63V-W0084-00)



NEWTOP

T15-6B4



Top cowling
6B4-42610-20



Crank cylinder assy
6B4-15100-00-1S



Anode
6B4-45251-00



Exhaust inner cover
63V-41111-00-1S



Exhaust inner cover
gasket
6B4-41112-A0



Exhaust outer cover
63V-41113-00-1S



Head cylinder
6B4-11111-00-1S



Cylinder head gasket
63V-11181-A2



Cylinder head cover
6B4-11191-00-1S



Head cover gasket
6B4-11193-A1



Thermostat cover
682-12413-00-1S



Cover gasket
682-12414-A1



Spark plug
94702-00160



Oil seal housing
6B4-15396-00-CA



O-ring
93210-46M16



Thermostat
6E5-12411-30



Crankshaft Oil Seal
93102-25010
93110-23M00



Crankshaft Assy
6B4-11400-00



Piston Assy
6E7-11631-00-97



Reed valve assy
63V-13610-10



Intake silencer assy
6B4-14440-00



Carburetor
6B3-14301-00



Fuel Filter
61N-24560-00



Manual starter assy
6B4-15710-00



Rotor assy
6B4-85550-01



Pulser coil
6B4-85550-00



Charge coil
6B4-85520-00



Lighting coil
63V-85533-00



CDI unit assy
6B4-85540-03



Ignition coil assy
6B4-85570-00



Cowling bottom rubber seal
6B4-42716-00



Engine stop switch assy
6E9-82575-02



Stopper
682-82556-00



Handle steering assy
6B4-42111-00-4D



Rubber handle
6G1-42177-00



Seal plate
682-45127-00



Lower unit assy
6B4-45300-01-4D S
6B4-45300-10-4D L



 
Pinion gear bearing
93315-314V8



Drive shaft
6B4-45501-00
6B4-45501-10



Cooling water hose
682-44361-01
682-44361-11



Handle steering
6B4-42111-00-4D



Handle steering cover
6B4-42131-00-4D



Throttle lever
6B4-42136-00



Throttle cable assy
6B4-26301-00



Throttle wire stay
63V-14497-02



Water pump housing
682-44300-40



Insert cartridge
682-44322-41



Impeller
682-44352-03



Cartridge outer plate
682-44323-40



Water pump below base
6E7-45331-00-CA



Gear shift handle
6B4-44111-00-4D



Shift rod lever
6B4-44121-00



Shift rod cam
6B4-44125-00



Shift bracket
6B4-41662-00



Arm
6B4-15746-00



Clutch dog
682-45631-00



Pinion gear
63V-45551-00



Gear I
6E7-45560-01



Gear II
6E7-45571-00



Propeller shaft
683-45611-00



Link rod
6L2-15747-00



Starter stop cable Comp
6B4-15770-00



Tilt rod assy
689-43160-00



Swivel bracket
682-43311-07-4D



Shallow water drive lever
6B4-43681-00



Lower casing cap
683-45361-02-4D



Propeller assy
683-45941-00



Lower casing anode
6B4-45251-00



Bracket filter
648-24566-02



Shift bracket
6B4-41662-00



Steering bracket
6B4-42511-00-4D



Steering pivot
682-42521-00-94



Upper side mount damper
682-44514-01-94



Bracket clamp
682-43112-05-4D
682-43111-05-4D



Lower mount rubber housing
682-44551-02-4D
682-44552-02-5D



Handle transom clamp
6E0-43118-01



Fuel line assy
61J-24306-03



Fuel tank assy
6YJ-24201-00



Exhaust guide
6B4-41137-00-CA



Upper casing gasket
682-45113-A2



Upper casing
682-45111-15-4D



Manifold
6B4-41131-00-CA



Seal damper plate
682-45126-01-CA

OUTBOARD SPARE PARTS

T30



Crankshaft
69P-11400-00



Carburetor
61N-14301-00



**Upper front mount
damper**
689-45516-00



 
Pull rod shaft
90249-06M22



Handle collar
90387-13003



Handle bush
90387-33001



**Exhaust manifold
gasket**
69P-41134-A0



Shift rod bracket
69P-44518-00-94



Inner frame pull rod
648-43617-00



Pull rod bracket
648-43642-00



 
Mount damper gasket
648-44591-A0



Absorber assy
664-44514-00-94



Exhaust gasket A1
69P-45127-00



Exhaust gasket A2
69P-45128-00



Clamp lever
689-42815-00



Bushing
664-42715-00



Shift cam plunger
664-44167-01



Clamp bracket
689-43112-02-4D
689-43111-03-4D



Pull rod
689-43616-00



Locking handle
689-43631-00



Tilt lever cover
689-43633-00



Wrest spring
689-43643-00



Compression spring
90501-14M07



Impeller
6H4-44352-02



Water inlet A
6L2-45214-00



Water inlet B
6L2-45215-00



Bracket
61N-44176-00



Lower casing
61N-45311-02-4D



Drive shaft base
61N-45331-00-5B



Lower casing cap
61N-45361-01-4D



Course tab
61N-45371-00



Pinion gear
61N-45551-00



Exhaust outer cover
61N-41123-00-1S



Cylinder head cover
gasket
61T-11193-A1



Thermostat gasket
655-12414-A1



Engine gasket
689-45113-A1



Spark plug
94702-00217



Forward gear
61N-45560-10



Reverse gear
61N-45571-00



Clutch ring
648-45633-00



Shift rod plunger
648-45635-00



Dog clutch
664-45631-02



Fuel filter assy
61N-24560-00



Swing shaft pulley
62Y-42171-00



Valve seat gasket
648-13621-A1



Mainfold gasket
648-13645-A0



Top cowling assy
69S-42610-40-4D



Clutch pin
90250-05010



Clutch spring
90501-10065



Drive shaft oil seal
93101-22067



O-ring A
93210-64ME7



Ball bearing
93306-00612



Outer cover gasket
6K8-41124-A1



Throttle cable
61N-26311-00



Lower shift lever cover
61N-45321-00



Upper casing seal
69P-42716-00



Compression spring
90501-09M08



Gear I roller bearing
93332-00005



Propeller spacer
6L2-45987-02



Ignition coil assy
61N-85570-00



Lighting coil
61N-81313-09



Power supply assy
69P-85541-09
61N-85543-09



Cylinder 1 head
61N-11111-01-1S



Piston ring
61N-11603-00



Piston
61N-11631-00-95



Thermostat cover
655-12413-01-1S



Piston pin
688-11633-00



Piston circlip
688-11634-00



Exhaust inner cover
6K8-41121-00-1S



Exhaust inner cover
gasket
6K8-41122-A1



Cylinder head gasket
61N-11181-A1


 


Cylinder head 1 cover
61N-11191-01-1S



T40X

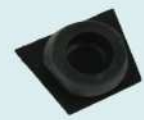

									
Tilt lock inner bracket 65W-43613-00	Tilt lock inner bracket B 65W-43614-01	Tilt lock inner bracket A 65W-43615-01	Bracket link 65W-43616-00	Tilt clamp handle assy 65W-43630-11	Carburetor 66T-14301-02	Crankshaft 66T-11400-01	Front damper 66T-44575-00	Lock plate assy 648-42528-00	Rotary bracket bush 90386-44M03
									
Clamp bracket 66T-43112-01-4D 66T-43111-01-4D	Tilt lock lever 66T-43631-11	Nylon washer 90202-12031	Locking bracket L 90249-07M32	Outer bracket S 90249-07M33	Rotary bracket washer 90386-44M99	Rotary bracket bush 90386-52M02	O-ring 93210-43MJ0	Handle plate 65W-42131-01	Shift handle 66T-44111-02
									
Sleeve 90387-07M29	Tension spring 90506-30M00	Mount damper 65W-44555-10	Double hole absorber assy 66T-44514-00-4D	Absorber plate 66T-44526-00	Shift rod 66T-44124-00	Lower casing jam 63D-45155-00	Exhaust seat gasket 66T-45114-A0	Drive shaft bush 679-45318-00	Clamp lever 66T-42815-01-4D
									
Locked block spring 90506-16M34	Pulser coil link 66T-41237-00	Throttle drive pulley 66T-41638-00	Drive wheel spring 66T-42167-00	Shift rod lever assy 66T-44121-00	Shift rod lever assy 66T-44121-00	Shift rod lever assy 66T-44121-00	Shift rod lever assy 66T-44121-00	Shift rod lever assy 66T-44121-00	Shift rod lever assy 66T-44121-00



Throttle block
66T-44125-01



Shift lever spring
682-44116-01



Impeller
6H4-44352-02



Nylon bush
6H4-45536-00



Oil seal casing A
63D-44341-00



Drive shaft seal A
90480-25M70



Drive shaft seal B
90480-30M71



Charge coil
66T-85520-00



Pulser coil
66T-85596-00



Ringent washer
90480-10M71



Water inlet A
63D-45214-00



Water inlet B
63D-45215-00



Lower casing cap
63D-45361-02-4D



Outer plate
66T-44323-00



Lower casing
66T-45311-01-4D



Intake silencer bush
90387-06M80



Cylinder head
66T-11111-01-1S



Cylinder head gasket
66T-11181-A3



Cylinder head cover
66T-11191-00-1S



Cylinder cover gasket
66T-11193-A3



Oil seal cover
66T-45344-01



Pinion gear
66T-45551-00



Forward gear
66T-45560-01



Reverse gear
66T-45571-00



Dog clutch
66T-45631-00



Crankshaft fixed washer
66T-11565-00



Oil seal casing
66T-15396-01-94



Exhaust cover
66T-41113-00-1S



Exhaust cover gasket
66T-41114-A0



Thermostat cover
676-12413-00-1S



Clutch ring
663-45633-00



Pinion gear nut
90170-12138



Clutch pin
90250-06023



**Water pump housing
o-ring**
93210-59MG7



Needle bearing
93317-22204



Oil seal
93102-30M56



Spark plug
94702-00272



Piston ring
66T-11603-00



Piston assy
66T-11631-01-93



Fuel fitting assy
661-24304-02



Roller bearing
93332-00001



**Water pump housing
cover**
63D-44312-00



Water seal
63D-45375-00



Drive shaft L bush
66T-44362-10




Propeller bush A
66T-45997-00



Ignition coil assy
66T-85570-00



Top cowling assy
66T-42610-K0-4D

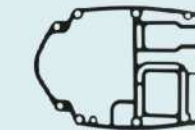

Engine gasket
66T-45113-A0



Fuel pump gasket
650-24431-A0



Thermostat gasket
676-12414-A1



Water tube seal
663-44366-00



Water tube bush
663-44367-00



Water seal plate
663-45376-00



Propeller bush B
90389-22M01



Water tube seal
90430-12072



**Water pump base
gasket**
63D-44316-00



**Exhaust manifold
gasket**
66T-41133-A0



Stopper shaft
65W-43191-00



Damper seal
65W-43373-00



Bush
90386-10M99



Transom clamp handle
663-43118-01-4D



Steering bracket
676-42511-02-4D



Steering pivot shaft
676-42521-00-94



Swivel bracket
676-43311-10-4D



Upper side of
mount damper
679-44514-00-94



Lower side of
mount damper
679-44555-00-94



Stopper
6F5-43627-80
6F5-43628-80



Lower casing
6J4-W4531-01-4D



Steering handle shaft
676-42115-00



Exhaust pipe seat
6F5-41116-00-5B



Exhaust manifold seat
6F5-41137-02-94



Engine gasket
6F5-45113-A0



Exhaust pipe
676-41131-01-5B



Exhaust pipe gasket
676-41133-A1



Exhaust manifold
gasket
676-45114-A1



Engine stop switch assy
682-82556-00
6E9-82575-02



Locking handle
6F5-42815-01-4D



Bottom cowling
6F6-42711-02-4D



Throttle link rod
6F5-41211-00



Throttle actuator pulley
6F5-41283-00



Shift handle
6F5-44111-00



Shift cam plate
6F5-44121-00



Shift rod lever B
6F5-44125-00



Shift control lever A
6F5-44173-00



Shift rod connector
648-44146-00



Carburetor
6F5-14301-00



Impeller
6F5-44352-00



Water pump insert
cover



Shift rod boost
650-44147-00



Water seal damper
663-44366-00



Dog clutch
663-45631-01



Clutch ring
663-45633-00



Cartridge outer plate
676-44323-40



Shift cam shaft assy L
679-44150-10



Baffle plate gasket
679-45315-A1



Bearing housing
679-45331-00-94



Drive shaft L
679-45501-10



Propeller shaft
679-45611-01



Crown nut
697-45384-00



Pinion gear nut
90170-12138



Pinion gear
6F5-45551-00



Forward gear
6F5-45560-00



Reverse gear
6F5-45571-00



Pinion gear
679-45551-00



Forward gear
679-45560-01



Reverse gear
679-45570-00



Clutch pin
90250-06023



Clutch spring
90501-16M01



Gear II ball bearing
93306-00702



Bearing
93315-32224
93317-22204



Drive shaft roller
bearing
93332-00001



Gear I roller bearing
93332-00003



Propeller
69W-45952-00-EL



Water seal
663-45375-00




Water seal plate
663-45376-00-94



Propeller spacer
663-45987-02



Fuel pump
692-24410-00

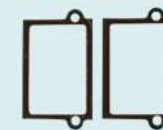

Intake valve gasket
6F5-13621-A1



Intake manifold 1 gasket
6F5-13645-A1



Intake manifold 2 gasket
6F5-13646-A2



Carburetor gasket
6F5-14198-A1



Water pipe L
676-44361-10



Water inlet A&B
688-45215-02
688-45214-02



Slotted nut
90171-16011



Inlet nut
90185-05002



Plug
90338-22007



Intake valve assy
6F6-13610-00



Choke linker
6F6-41256-00



Intake silencer
6F5-14417-00
6F5-14418-00



Choke handle
682-41271-00



Top cowling rubber seal
6F5-42615-00



Cotter pin
91490-30025



Ignition coil
6F6-85530-00



C.D.I unit assy
6F6-85540-10



Thermosensor
688-82560-10



Charging coil
6F5-85520-00



Starter stop cable comp
6F5-15770-00



Detent cable frame A
6F5-15773-00



Detent cable frame B
6F5-15774-00



Starter assy
6F5-W1571-02



Termostato cover
6E9-12413-00-1S



Lighting coil
6F5-85533-00



Flywheel
6F5-85550-F2



Pulser coil assy
6F5-85580-00



Flywheel nut
90170-20137



Stator coil base



Termostato cover gasket
6E9-12414-A1



Cylinder 1 head gasket
6F5-11181-A1



Exhaust inner cover
6F5-41111-01-1S



Exhaust outer cover
6F5-41113-01-1S



Cylinder 1 head
6F6-11111-00-1S



Crankshaft assy
6F6-11400-01



Piston assy
6F6-11631-00-95



Piston needle bearing
93603-21111



Thermostat
6F5-12411-02



Crankcase anode B
676-11325-00



Cylinder 1 head cover
6F6-11191-00-1S



Head cover gasket
6F6-11193-A1



Crankcase assy
6F6-15100-00-1S



Handle steering assy
6F6-W0084-00-4D



Top cowling assy
6J4-42610-J0-4D



Crankcase anode A
676-45251-00



Sprak plug
94702-00272



Fuel pipe joint comp
6G1-24304-02



Fuel filter cup assy
61N-24560-00



Fuel pump gasket
650-24431-A0



Clamp bracket set
676-43111-04-4D
676-43112-04-4D



Water pump gasket
676-44315-A1



Cartridge gasket
676-44324-A1



Water pump gasket
679-44316-A1



Oil seal

PROPELLER ASSY



